

# Setup Camera for Tethered PC Shooting

**IS Pro**  
UV/IR

Please be sure your using the most updated IS Pro camera firmware and latest HyperUtility HS-V3 update before continuing.

1. Access Setup / SYSTEM in Tab two of the setup menu
2. Access the USBMODE menu
3. Select the PC SHOOT AUTO mode

Connect the IS Pro to a PC via USB.

Turn on HyperUtility HS-V3 and select the IS Pro icon in the lower right corner (*S5 Pro if IS Pro Icon does not exist*) Follow on screen menus. (*Recommend using AC adapter at all times*)



**FUJIFILM**