


Quickstart

Camera Controls

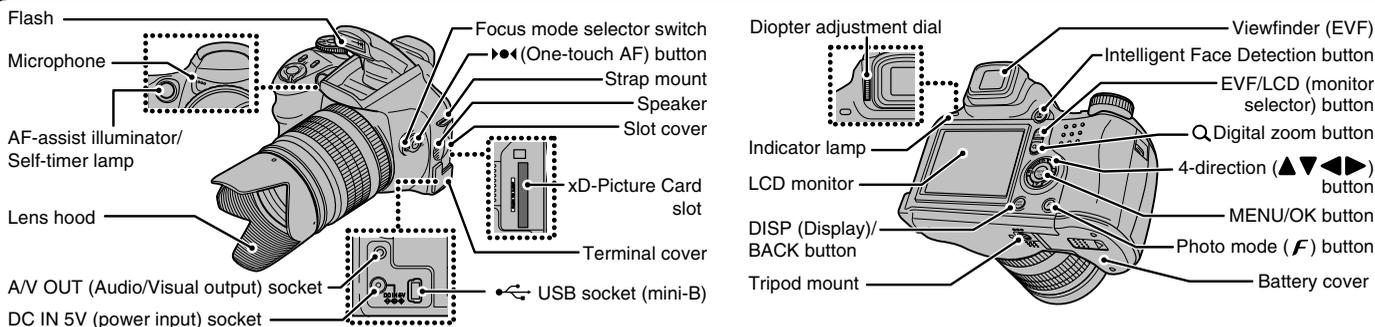


Still photography

- | | |
|-------------------------|--------------------------|
| AUTO Auto | SP Scene Position |
| Picture Stabilization | P Programmed Auto |
| Natural light/Natural & | S Shutter-priority Auto |
| Portrait | A Aperture-priority Auto |
| Landscape | M Manual |

Movie recording

- Movie

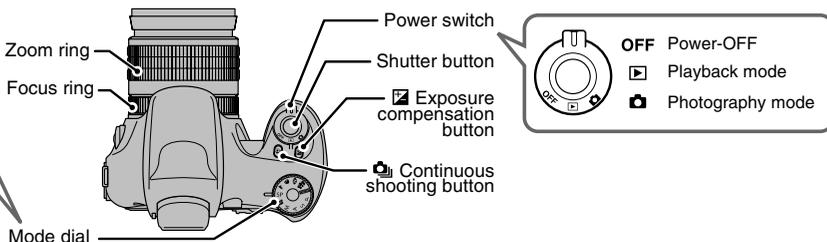

BL00549-200(1) E

Picture Taking

Refer to Owner's Manual for more detailed instructions

A. Loading the Batteries

- Open the battery cover. Check that the camera is turned off before opening the battery cover.
- Load the batteries correctly as indicated by the polarity icons.
- Press on the battery cover to push the batteries down. Slide the cover closed.

B. Setting up the Camera

- Set the Power switch to or to turn the camera on.
- 言語/LANG. screen appears on the screen.
- Press , , , or to select the language.
- Press MENU/OK to confirm the setting.
- You can select your preferred date format.

- Press or to select Year, Month, Day, Hour, or Minute. Press or to correct the setting.
* Refer to the Owner's Manual for "Turning On and Off".

C. Taking Pictures

- Set the Power switch to and set the Mode dial to **AUTO**.
- Press the shutter button down halfway to adjust the focus.
Halfway pressed
- Press the shutter button down fully to take a picture. The camera makes a "Click" sound and takes the picture.
Fully pressed

D. Viewing the Images

- Set the Power switch to .
- Press or to move through your images.

FinePix S6000fd / FinePix S6500fd has internal memory that can store images without xD-Picture Card. Use an xD-Picture Card (sold separately) when recording a large number of images.

Still images that can be viewed on FinePix S6000fd / FinePix S6500fd

You can use this camera to view still images recorded on FinePix S6000fd / FinePix S6500fd or still images (excluding some uncompressed images) recorded on a FUJIFILM digital camera that supports xD-Picture Card.


Viewing Images on your PC



A. Installing Software

B. Connecting the Camera to your PC

C. Saving the Images

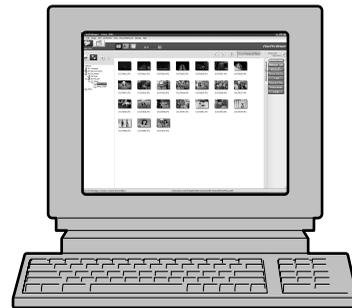

A. Installing Software

Do not connect the camera to your PC until the software installation is completed.


1. Turn on your PC and start up Windows.
 - Users of Windows 2000 Professional or Windows XP should log in by using a system administrator account (e.g. "Administrator").
2. Quit all other active applications until no applications are shown in the taskbar.
3. Load the enclosed CD-ROM into the CD-ROM drive. The installer starts up automatically.
4. The Setup screen appears. Click the [Installing FinePixViewer] button.



5. After installation completed, press [Close] button.

B. Connecting the Camera to your PC

1. Insert the xD-Picture Card with images into the camera.
2. Connect the camera to your PC using the USB cable (mini-B).

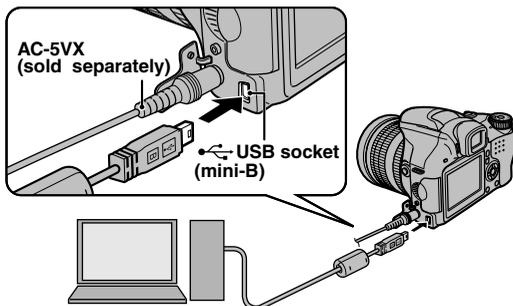

3. Set the Power switch to to turn the camera on.


4. Windows 98 SE/Me/2000 Professional

FinePixViewer starts up automatically.

Windows XP

The "Found New Hardware" help message appears in the bottom-right corner of your screen. This message will close when the settings are completed. No action is required.

FinePixViewer starts up automatically.

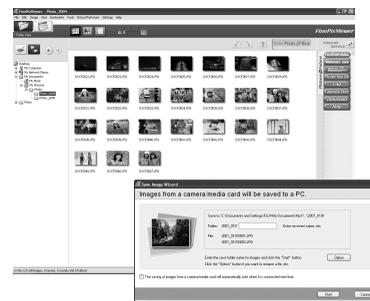

C. Saving the Images

1. The Save Image Wizard starts up. Click the [Start] button.
2. Check that the files are downloaded from the camera to your PC and that a folder with the date is created.
Ex. My Documents \ My Pictures \ 2006_0824

D. Viewing the Images

1. Click the [Show List of Images] button.
2. Select "Preview" in the View menu to display an enlarged image.

For more information

Refer to "How to use FinePixViewer" in the HELP menu, or "Software Installation" in the Owner's Manual, or visit Fujifilm "Q&A Search" in the following website.

(<http://www.fujifilm.com/products/digital/>)

For Macintosh users, refer to "Software Installation" in the Owner's Manual.