


ROOM FOR THE FUTURE, GEMTRAC STORAGE SYSTEM

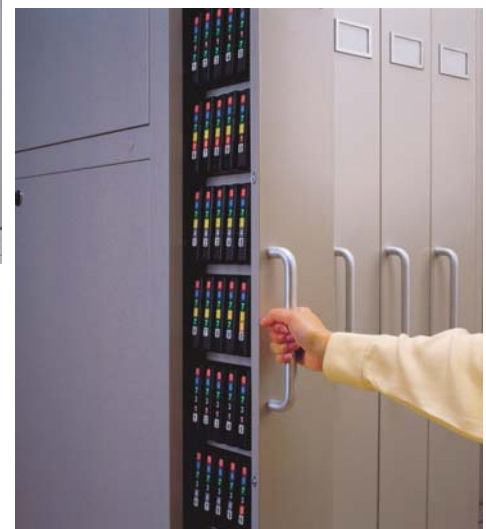

The Fujifilm Gemtrac gives you back the space you need. Gemtrac is a high density, quick access storage system that makes the most efficient use of your floor space. Gemtrac can store up to 4,060 LTO data tape cartridges in their plastic cases, **in 70% less space** than traditional open tape racks. Gemtrac is made of high quality steel and manufactured in the USA by Russ Bassett.

FUJIFILM

FUJIFILM GEMTRAC SPECIFICATIONS

DESCRIPTION	PART NUMBER	SLOTS PER SHELF	SHELVES PER DRAWER	DRAWERS PER UNIT	TOTAL CAPACITY	HEIGHT (inches)	WIDTH (inches)	DEPTH (inches)	WEIGHT (pounds)
81" GEMTRAC ENTERPRISE/DLT® NO CASE	81110000320	31	14	10	4,340	81"	120"	30.25"	2,200 lbs.
81" GEMTRAC DLT	81110000322	25	14	10	3,500	81"	120"	30.25"	1,810 lbs.
81" GEMTRAC LTO NO CASE	81110000324	36	14	10	5,040	81"	120"	30.25"	2,350 lbs.
81" GEMTRAC LTO	81110000323	29	13	10	3,770	81"	120"	30.25"	1,688 lbs.
90" GEMTRAC ENTERPRISE/DLT NO CASE	81110000332	31	16	10	4,960	90"	120"	30.25"	1,936 lbs.
90" GEMTRAC DLT	81110000331	25	16	10	4,000	90"	120"	30.25"	2,410 lbs.
90" GEMTRAC LTO NO CASE	81110000330	36	16	10	5,760	90"	120"	30.25"	2,560 lbs.
90" GEMTRAC LTO	81110000321	29	14	10	4,060	90"	120"	30.25"	1,894 lbs.



DRAWER FUNCTION

Gemtrac's unique design incorporates drawers (actually pull-out shelves) instead of open rows of tape racks. Gemtrac drawers are constructed entirely of heavy duty furniture grade steel, with no plastic parts to fatigue or break. Each tape cartridge is safely housed in an individual slot to insure file integrity.

The drawers are ergonomically designed to be opened with a natural pulling motion rather than the uncomfortable side-to-side motion typical of open tape racks with sliders.

BENEFITS

High-density storage	More tapes per square foot than any other storage system
Improved productivity	Reduced library size minimizes walking time
Quick access to media	Reach up to 5,760 tapes without taking a single step
Enclosed storage	Protects your valuable media from dust, light and sprinkler systems. Gives your tape library a clean, organized look.

FEATURES



Steel Overhead Tracks

Sturdy all-steel overhead tracks are engineered to safely suspend heavy loads, typical of tape storage, while keeping aisles free of obstructions.



Heavy Duty Rollers

Each drawer is suspended by eight precision ball-bearing rollers to provide ultra-smooth and quiet drawer movement time after time.



All Steel Construction

Gemtrac is constructed entirely of heavy duty furniture grade steel, without any plastic parts to fatigue or break.



Leveling Glides

Gemtracs are equipped with high load capacity leveling glides on all corners to insure perfect alignment. Each of the eight glides has a 3" x 3" foot and a 5/8" diameter threaded shaft.



Optional Lock

For an extra measure of security, Gemtrac is available with an optional gang lock.

Powder Coat Finish

Gemtrac is finished in a durable and media-friendly powder coat. Units will ship standard in Neutral Gray unless otherwise specified.



© 2009 FUJIFILM Recording Media U.S.A., Inc.
LTO and Ultrium are trademarks of HP, IBM and Quantum Corporation in the U.S. and other countries. DLT and DLTape are trademarks of Quantum Corporation. Other trademarks are property of their respective owners.

For more information, please call 1-800-488-3854 or visit us at www.fujifilmusa.com/tapestorage

CODE: GTRAC09-1 Printed on Recycled Paper

FUJIFILM